

Electro-Voice®
a **Gulton** company

Model 100T Tripod Stand

This tripod stand is designed to support the 100S speaker (weight limit—75 lbs). Please read these instructions carefully. (See Figure 1 below)

SETTING UP

On removal from the bag, first tighten the collar hand knob and loosen the leg fitting hand knob. Now turn the tripod upside down and pivot each leg outward enough to start sliding the leg fitting. Return the tripod to upright position and adjust the leg spread to the desired diameter by sliding the leg fitting. Be sure to tighten the hand knob on the leg fitting snugly after adjustment.

NOTE

Do not over tighten the hand knobs, as this will result in undue stress on the fitting. Just tighten enough to hold its position firmly.

Attach adaptor by inserting knurled end into upper tube until adaptor shoulder meets upper tube. (Use only enough force to seat adaptor). Adaptor will become a permanent part of stand assembly.

Raise the speaker up and then lower it onto the tripod upper tube. The top of

the tripod can be lowered within easier reach by adjusting the leg spread to a smaller diameter. Leg spread can be readjusted after the equipment is mounted. Loosen the collar hand knob and raise the upper tube to the desired height setting; then retighten the hand knob snugly. The last 6 inches of the upper tube has been dyed red as a warning. Do not extend it higher than the point at which the red begins to show at the collar.

BREAKDOWN

Exercise extreme caution when loosening either hand knob while the tripod has a load on it. Lower the upper tube slowly until it bottoms out. Tighten the collar hand knob before attempting to lift the equipment off. Then loosen the leg fitting hand knob and return the legs to their folded positions.

CARE

Treat the stand with the care that any fine instrument deserves. Dents in the lower or upper tube will hamper the telescoping action. A damp cloth or non-abrasive cleaner can be used to clean the stand.

WARRANTY (Limited)

Electro-Voice, Inc. warrants to the original user that its product shall be free from defects in material or workmanship for a period of one (1) year from the date of purchase.

For any product believed to be defective within the warranty, first write or call Electro-Voice, Inc., 600 Cecil Street, P.O. Box 186, Buchanan, MI 49107 (Phone: 616/695-6831). Any product which is determined to be defective in material or workmanship and returned, shipping costs prepaid, will be repaired or replaced at the manufacturer's option. Proof of purchase must be submitted with the returned product.

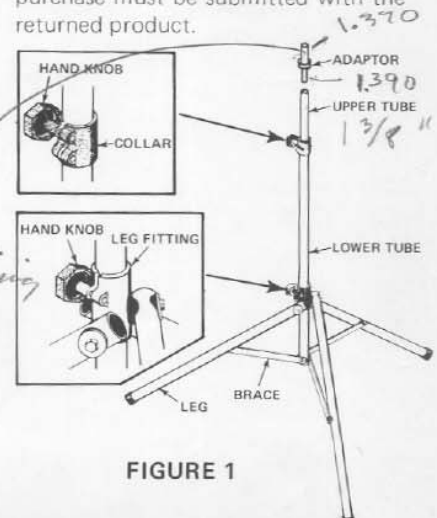


FIGURE 1

Part Number 530175-205